


Room E314


High Tech Classroom

by Dennis Mack, Audio Visual Technician

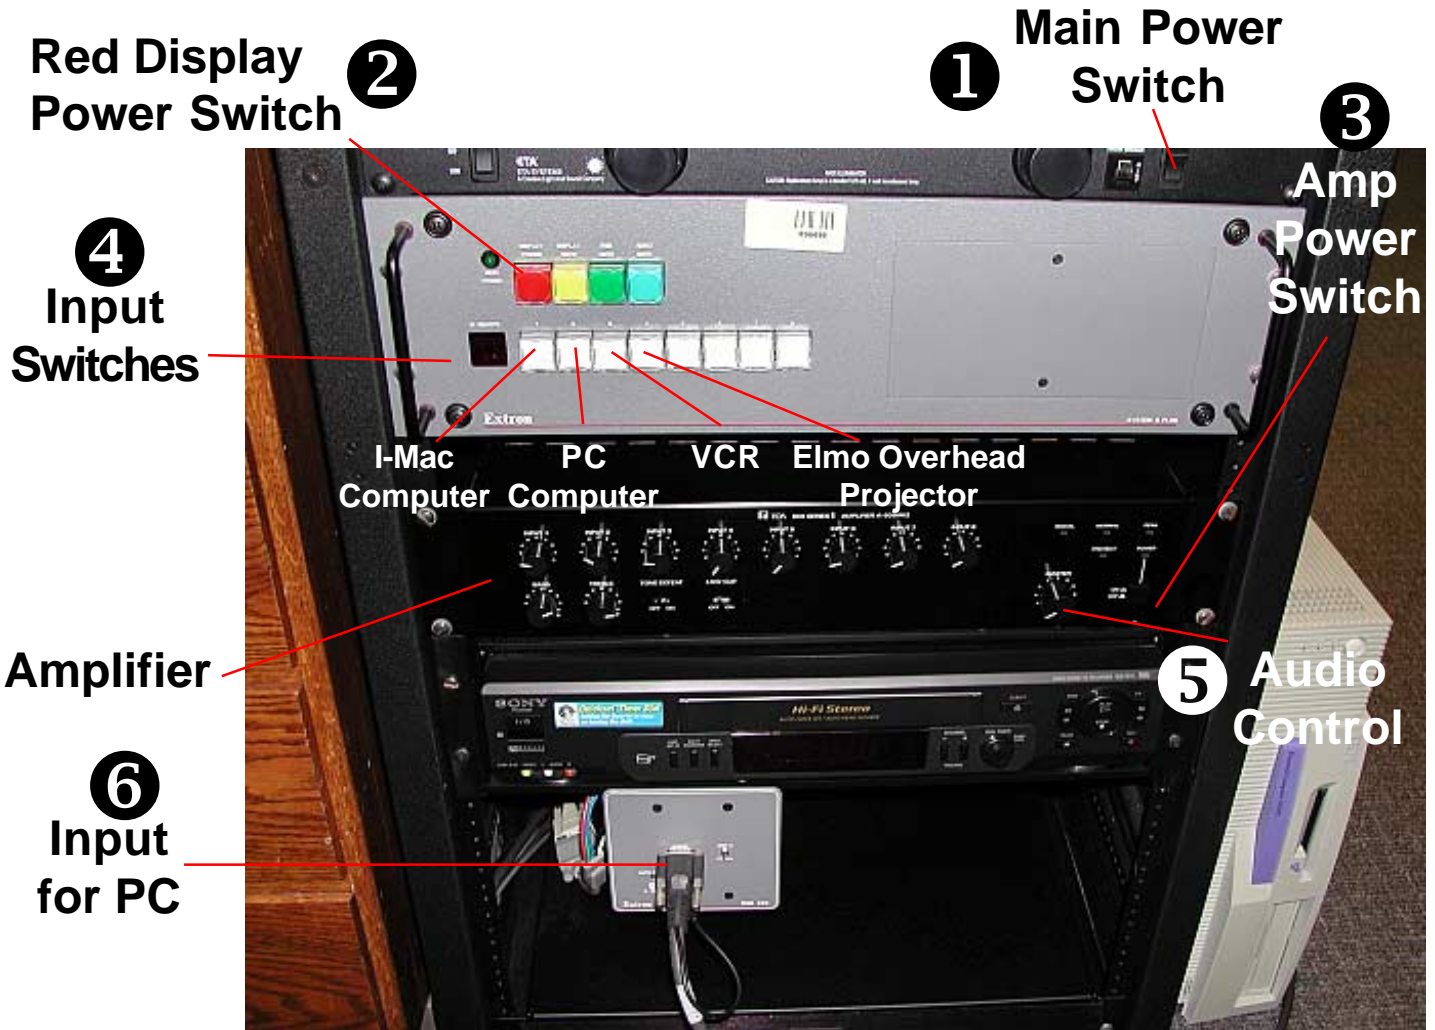

7 Internal Input

- 1 Power Up. Turn on the Main Power Switch.
- 2 Press and hold the Red Display Power Switch until it blinks.
- 3 Turn on the Amplifier.
- 4 Choose the correct Input Switch for the I-Mac, PC, VCR or Elmo Overhead Projector.
- 5 Adjust the audio control if necessary.
- 6 This is Video Input from the PC. A laptop PC can be connected here.
- 7 When using the Elmo Overhead Projector, be sure to select Internal Input.
- 8 Power Down: Press the Red Display Power Switch until it blinks. The projector will power down.

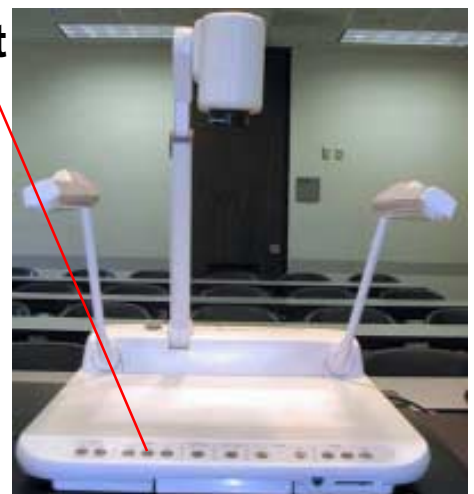

Room E314

High Tech Classroom

by Dennis Mack, Audio Visual Technician



Troubleshooting Tips

1. If no video is showing on the screen, be sure the projector has been turned on. If the Red Display Switch is not lit, press it until it blinks.
2. If there is still no video showing on the screen, be sure the correct Input Switch has been selected.
3. If there is no audio, be sure the Amplifier has been turned on and the Audio Control is turned up.
4. If you are using the Elmo Projector, there is no image on the screen, and you have selected the correct input, be sure the Internal Input Switch on the Elmo Overhead Projector has been selected.